Thank you for your purchase of the FUNN ZIPPA BASH.

Please take a moment to review these instructions thoroughly before you start the installation process. It's crucial to follow the fitting instructions in sequence to meet FUNN's warranty policy requirements.

TOOLS REQUIRED


- **Hex key 4mm**

CONTENTS


· **ZIPPA BASH**	**1 SET**	· **1.5mm Spacer**	**1 PC**
· **2 mm Spacer**	**1 PC**	· **Tapered Spacer**	**1 PC**
· **M6x10mm Countersunk Bolt**	**2 PCS**	· **M6x16mm Countersunk Bolt**	**2 PCS**

INSTALLATION

1. The Zippa bash can be used on its own or paired with the Zippa Lite ISCG05 for enhanced chain drop protection. When installing the Zippa bash alone, ensure a 1.5mm spacer is placed between the bash and the front ISCG05 tab on the frame.

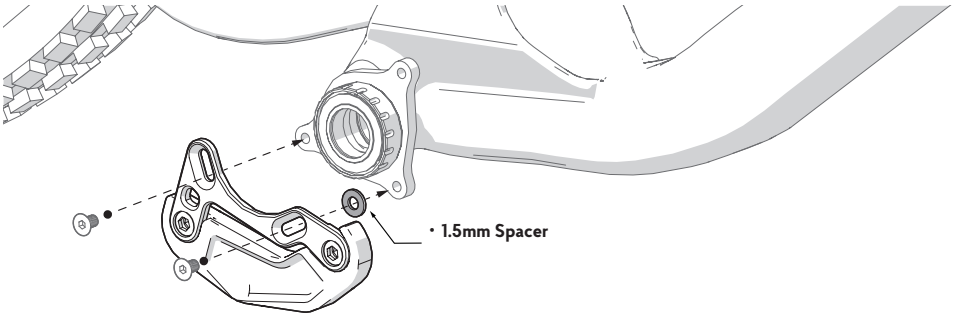

2. Position the Zippa bash behind the crank and chainring, secure with M6x10mm bolts, and tighten to the recommended 6Nm torque. If the crankset blocks access to the ISCG05 tab, remove the crankset according to the manufacturer's manual before installing the Zippa bash.

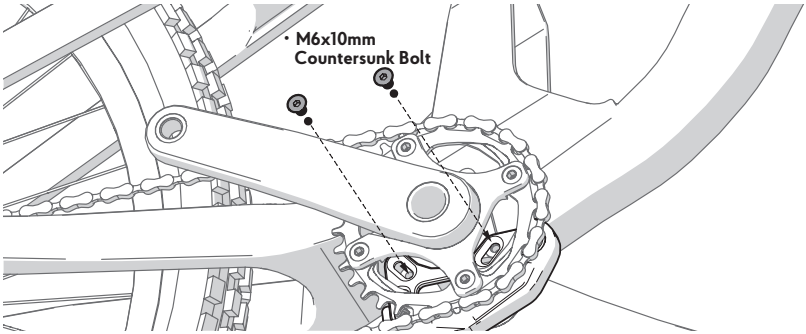

BASH + ISCG05 TOP GUIDE

1. To install the Zippa Lite ISCG05 chain guide with the Zippa bash, insert a 2mm spacer between the rear ISCG05 tab and the Zippa bash, and a tapered spacer between the Zippa bash and the chain guide. Secure both the chain guide and bash guard with M6x15mm bolts, tightening them to 6Nm.

