SPEEDRUN HANDLEBAR
INSTALLATION AND USE

Thank you for your purchase of the FUNN SPEEDRUN HANDLEBAR.


Please take a moment to review these instructions thoroughly before you start the installation process.
It's crucial to follow the fitting instructions in sequence to meet FUNN's warranty policy requirements.

CONTENTS


- **Speedrun handlebar** ---------- **1 PC**
- **Adapter ring** ---------- **4 PCS**


INSTALLATION

1. Remove the grips, brake and shifter levers from the old handlebar. Then, remove the old handlebar from the stem.

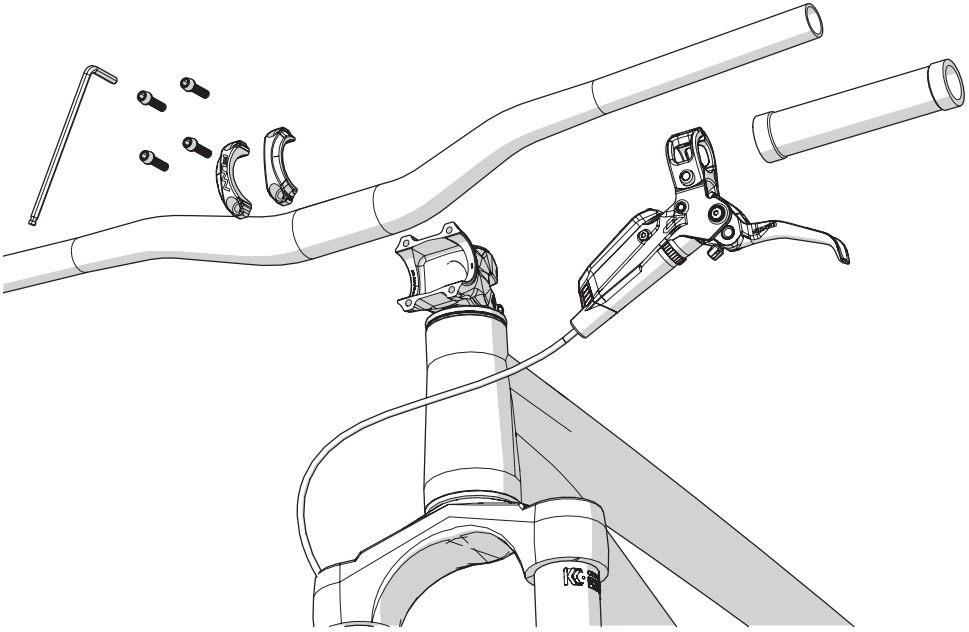

3. Make sure the stem is compatible with a 31.8mm handlebar. Align the handlebar and lightly tighten the clamping bolts. Adjust the handlebar to the desired roll angle, ensuring it is centered. Then, torque the bolts to the stem's specifications.

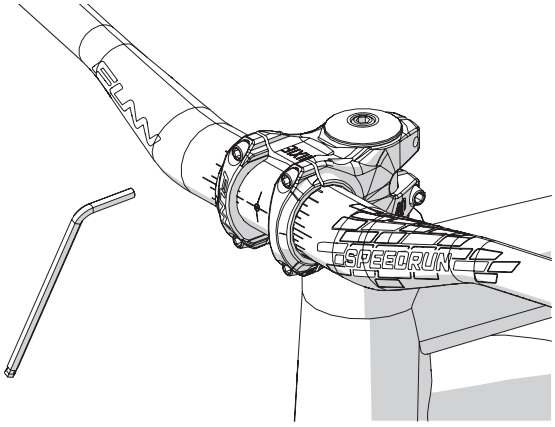

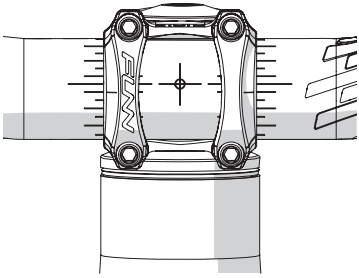

3. Mount the brake and shifter levers onto the Speedrun handlebar, using adapter spacers if necessary. Once the levers are securely in place, proceed to install the grips.

